

Setting up with BE2.inf on Win7


The driver installation should happen automatically on Windows 7 when you first connect your Blackeye camera.

Step1: Check that Windows7 is setup to automatically download drivers, by clicking on the Windows start button




and locate the search box on the popup startup screen, and type in 'device installation settings'

Click on the item at the top of the popup screen that says 'Change Device Installation Settings', as shown below.

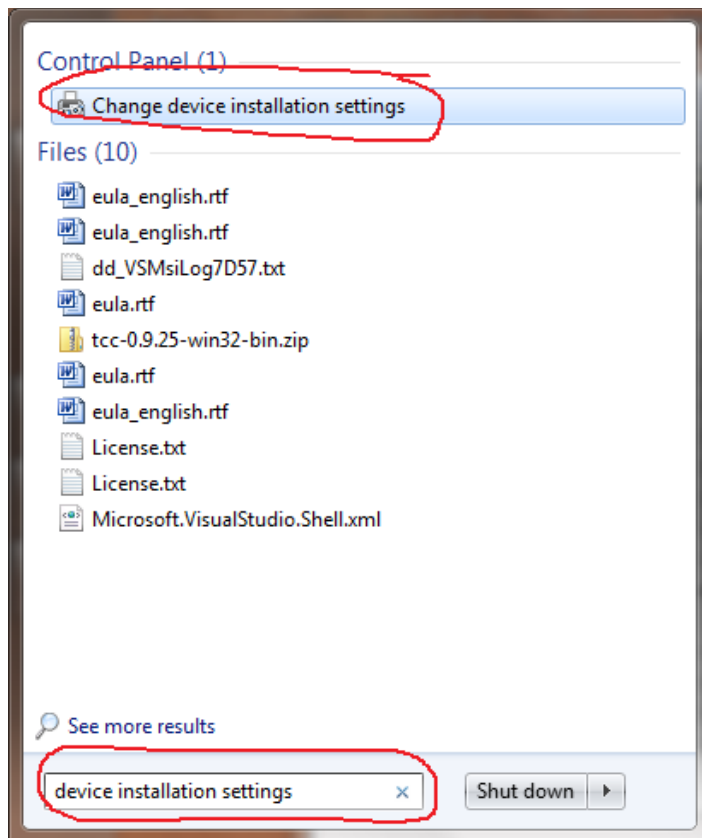


Make sure that the Windows is setup to automatically download drivers, as shown below.

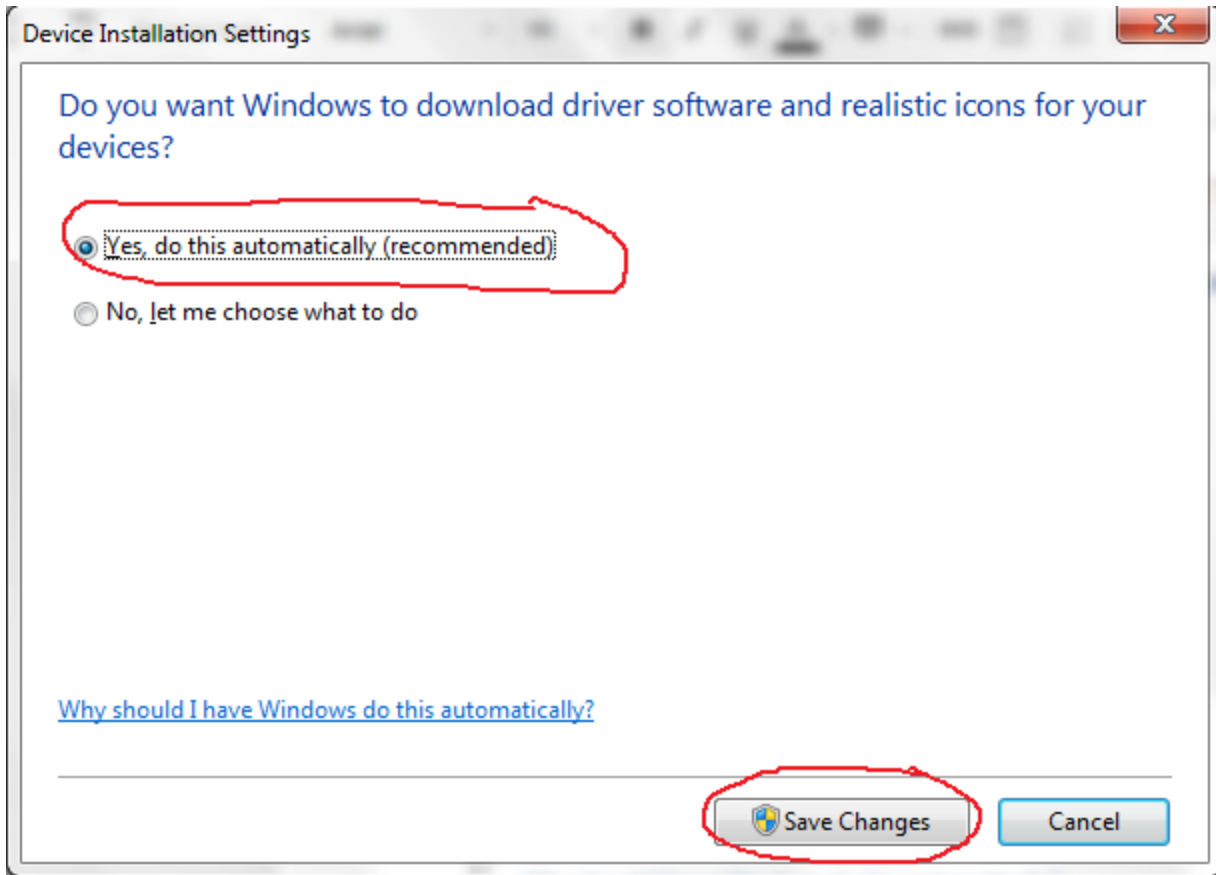


Connect you Blackeye camera via a usb cable to a usb port on your Windows7 computer.

Switch your Blackeye camera 'on'.

After about 50 seconds when the camera completes booting, you will see a text box 'click here for details' - if you click on this you will see the driver installation progress notification window.

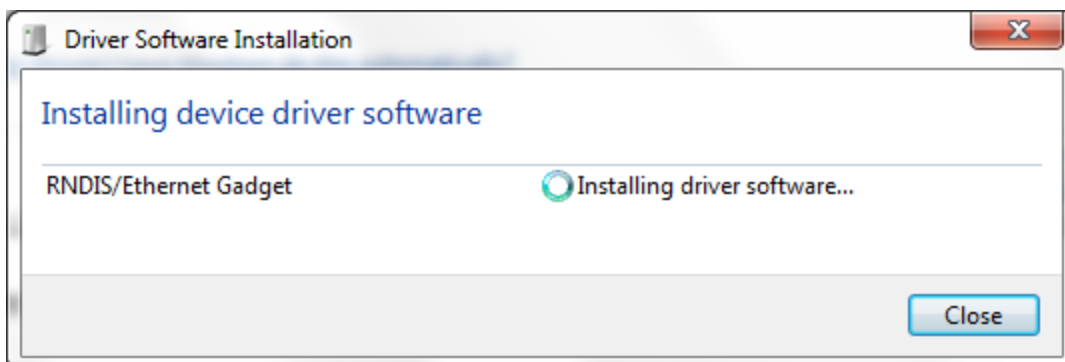

and when installed... and you can close this window.

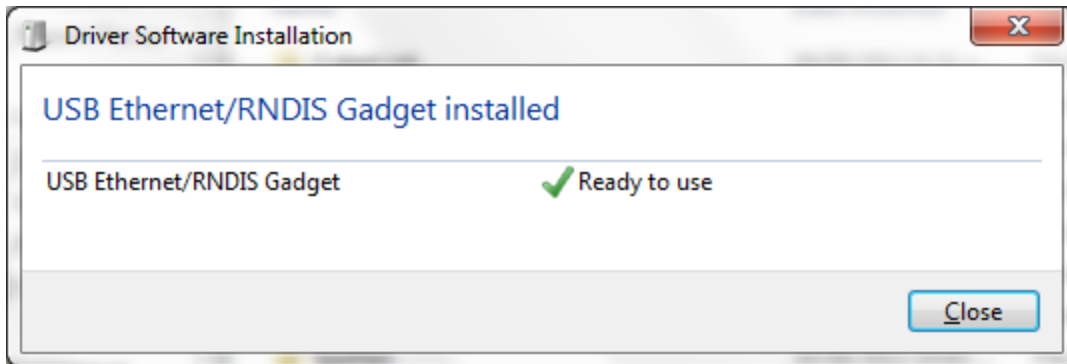

Now you can open your browser and in usb IP address supplied with your camera in the web address field, and you should go straight the the Blackeye camera 'record' page

